



Type of Breaker

Telect Panel Part No.	Rocker Style Standard Trip 20A Max (A)	Standard Trip No Faceplate (B)	Standard Trip w/ 0.74" Faceplate (C)	Standard Trip w/ 1.115" Faceplate (D)	Instant Trip No Faceplate >20A (E)	Mid Trip No Faceplate (F)	Supports TFD Fuse Holder
009-6212-2100				x	x		x
350CB06				x	x		x
009-7000-0104 Family				x	x		x
125DM08 Family				x	x		x
600CBXX Family		x				x	x
007-0001-260X Family			x				x
T009-50XXXXXXXXXX Family	x						

NOTE: When looking up a breaker part number on the second page, use the reference letter (A-F) for a quick reference.

Standard Trip	Mid Trip	Instant Trip
Airpax LEL or Carling CA1 series	Airpax LML or Carling CT1 series	Airpax LML or Carling CA1 series
Single-pole with one handle per unit	Single-pole with one handle per unit, mid-trip indication	Single-pole with one handle per unit
Delay curve 52 (Airpax) or 14 (Carling)	DC long delay, delay curve 52 (Airpax) or 14 (Carling)	Delay curve 59 (Airpax) or 11 (Carling)
80 Vdc maximum	80 Vdc maximum	80 Vdc maximum
Bullet terminals	Bullet terminals	Bullet terminals
Black with white markings	Black with white markings	Black with white markings

Breaker Descriptions

Standard Trip	Standard breakers are a Thermal Magnetic type breaker. They have a trip condition of either "ON" or "OFF." The alarming on these type breakers must be done using the "OFF" condition.
Mid Trip	This refers to the actuator which is the handle that sets the position of the breaker to either the "ON" or "OFF" position. The mid-trip is used in association with alarms. The mid-trip gives the ability to alarm only on a "tripped" event. This is key to allowing maintenance and or installation without having an alarm when in the "OFF" position.
Instant Trip	Breakers come in two types, Thermal Magnetic and Magnetic only. The instantaneous trip breakers are a Magnetic only type of breaker which means they do not have a thermal requirement to trip or in other words they trip instantly when a short or fault condition occur.

Panel Notes

The 600CBXX can use mid- or standard-trip breakers interchangeably, as listed on opposite side.
For the BDFB (007-0001-260X), use the breakers as listed on opposite side.
For panels 009-6212-2100, 350CB06, 125DM08, 009-7000-0104, use breakers as listed, except for more than 20 amps, at which point the instant trip breakers can be used interchangeably. (Faceplate is sold separately.)

Circuit Breaker :: Reference Guide

Amperage

		Single Pole									
Breaker Type		1A	2A	2.5A	3A	5A	7.5A	10A	15A	20A	25A
Rocker Style Standard Trip	(A)	129316RC			129317RC	129318RC		129320RC	129321RC	129322RC	
Standard Trip No Faceplate	(B)	118714	119103		124210	117852		116669	115999	116670	117402
Standard Trip w/ 0.74" Faceplate	(C)	090-0052-1001	090-0052-1002		090-0052-1003	090-0052-1005		090-0052-1010	090-0052-1015	090-0052-1020	090-0052-1025
Standard Trip w/ 1.115" Faceplate	(D)	090-0052-0001	090-0052-0002		090-0052-0003	090-0052-0005		090-0052-0010	090-0052-0015	090-0052-0020	090-0052-0025
Instant Trip No Faceplate*	(E)									140368	140369
Mid-Trip No Faceplate*	(F)			138680		136983	138679	138678	138677	138676	

		Single Pole								
Breaker Type		30A	40A	45A	50A	60A	70A	80A	90A	100A
Rocker Style Standard Trip	(A)									
Standard Trip No Faceplate	(B)	116671	116672		116673	118160	118161	118162	118163	118159
Standard Trip w/ 0.74" Faceplate	(C)	090-0052-1030	090-0052-1040		090-0052-1050	090-0052-1060	090-0052-1070	090-0052-1080	090-0052-1090	090-0052-1100
Standard Trip w/ 1.115" Faceplate	(D)	090-0052-0030	090-0052-0040		090-0052-0050	090-0052-0060	090-0052-0070	090-0052-0080	090-0052-0090	090-0052-0100
Instant Trip No Faceplate*	(E)	140370	140371		140372	140373	140374	140375	140376	140377
Mid-Trip No Faceplate*	(F)	138675	138674	131185	138673	138672	138671	138670	138669	138392

		Double Pole				Triple Pole			Quadruple Pole
Breaker Type		125A	150A	175A	200A	200A	225A	250A	400A
Rocker Style Standard Trip	(A)								
Standard Trip No Faceplate	(B)	134634	134635	135921	135922	134636	134637	134638	143962
Standard Trip w/ 0.74" Faceplate	(C)	090-0052-2125	090-0052-2150						
Standard Trip w/ 1.115" Faceplate	(D)								
Instant Trip No Faceplate	(E)								
Mid-Trip No Faceplate	(F)		143463		143465				

Load Strap

Single Pole	Double Pole	Triple Pole	Quadruple Pole
	600CB08-2PK	600CB08-3PK	
600CB1X-1PK	600CB1X-2PK	600CB1X-3PK	600CB1X-4PK

Fuse Holders

TFD w/ 1.115" Faceplate (D)	TFD No Faceplate (B,C)	TPC No Faceplate
090-0001-0033 (plastic)	129816 (plastic)*	129347
090-0001-0034 (steel)		
Replacement GMT fuse for TFD Holder: 130781		

Stand Alone Faceplates

CB: 0.74" (F)	CB: 1.115" (E)	TFD Holder (B,C)
600CBXX-CBK	115305-1	600CBXX-CFK
*Stand alone faceplate required, unless replacing an existing circuit breaker or TFD holder		