

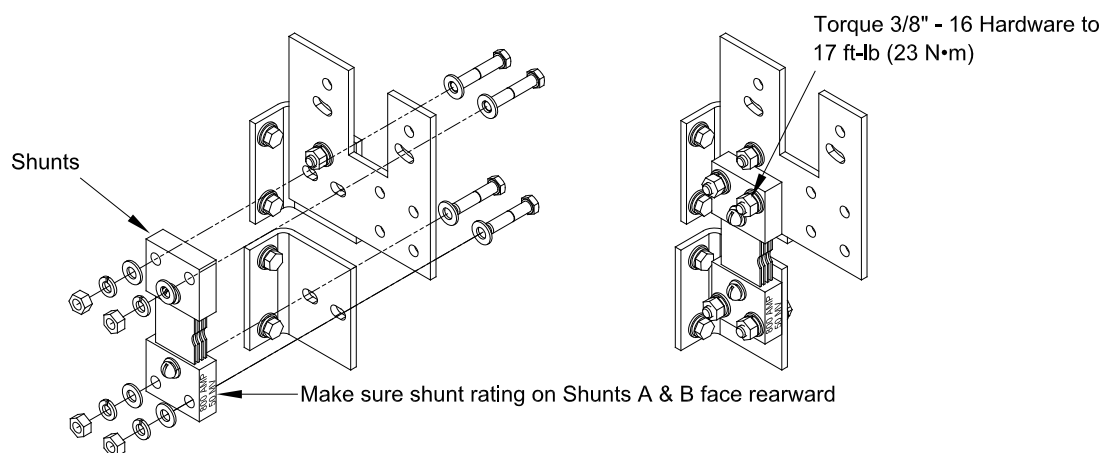


# BDFB / BDCBB Shunt Kits


## Models 007-0006-0400 / 007-0006-0600 Installation Guide

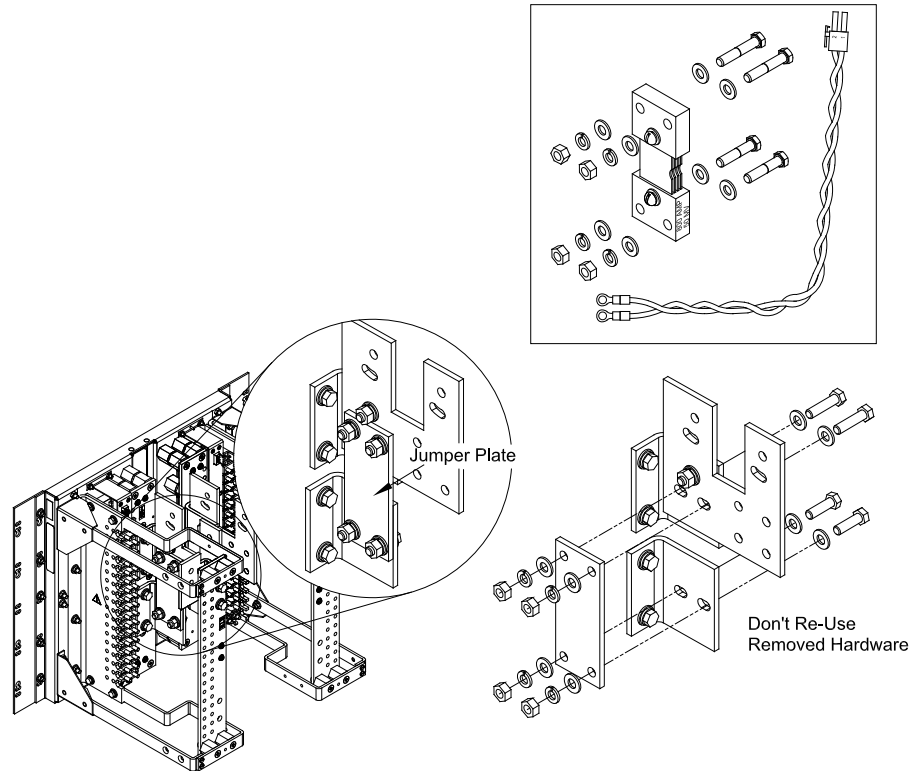

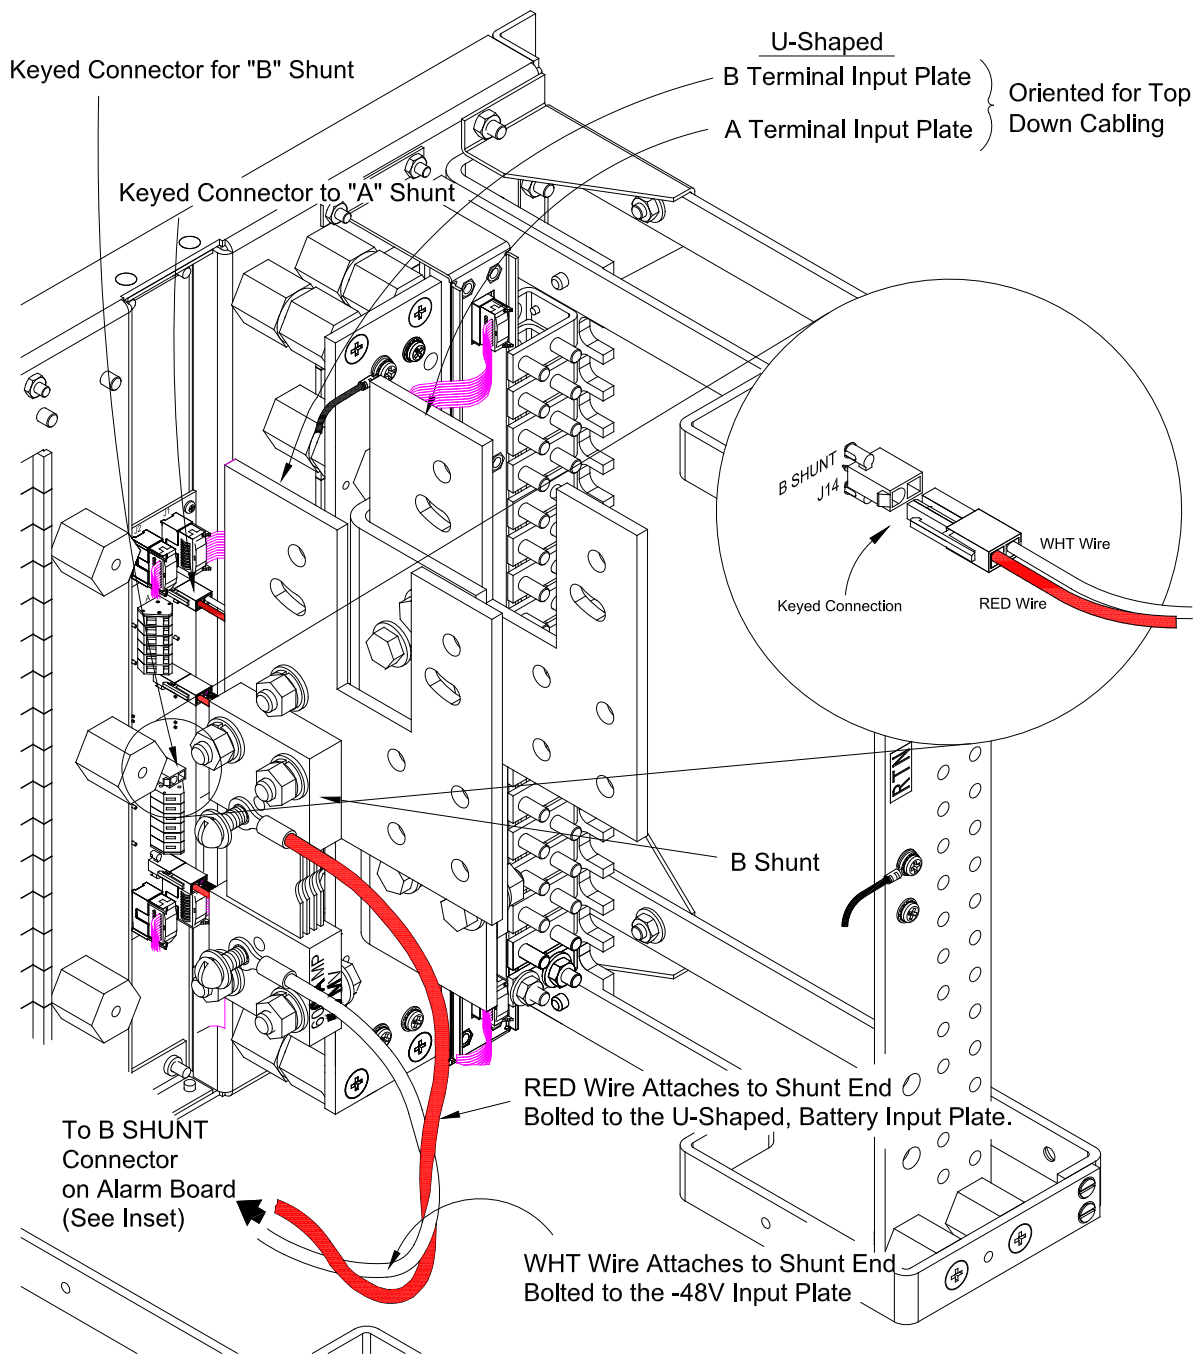


**Figure 3 - Electrical Connections Between Shunt & Alarm Board on Rear of Standard Panel Cover**


Jumpers for Designating Shunt Rating (Amperage).  
See Page 4.

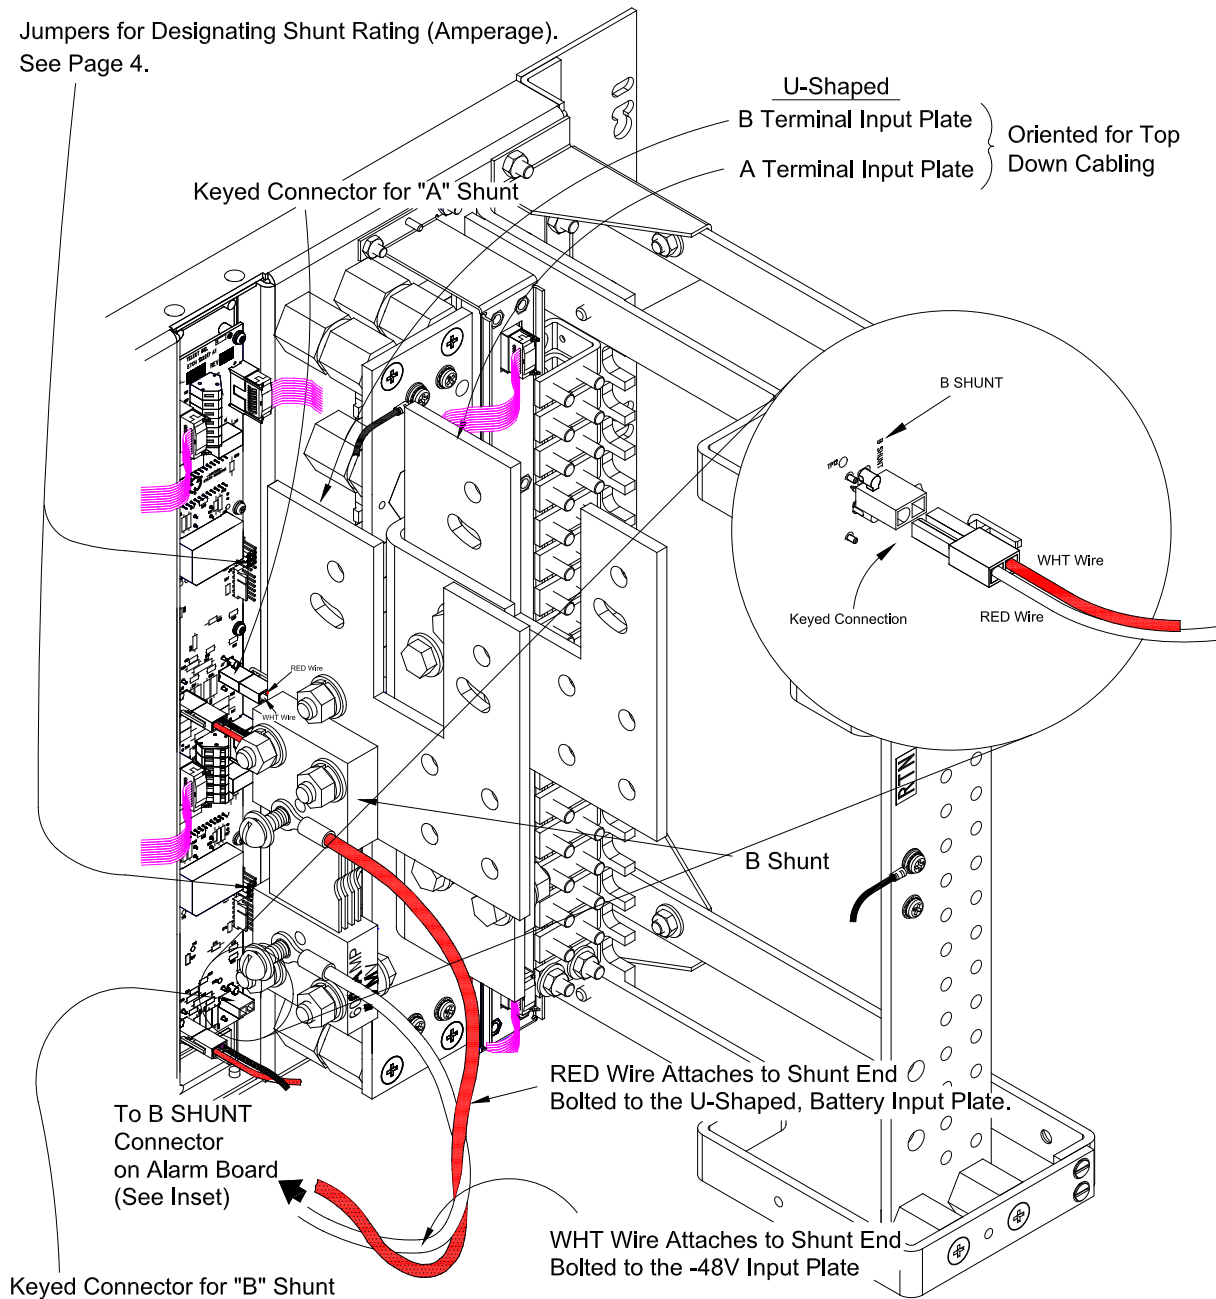

**Figure 4 - Electrical Connections Between Shunt & Alarm Board on Rear of Digital Metering Panel Cover**

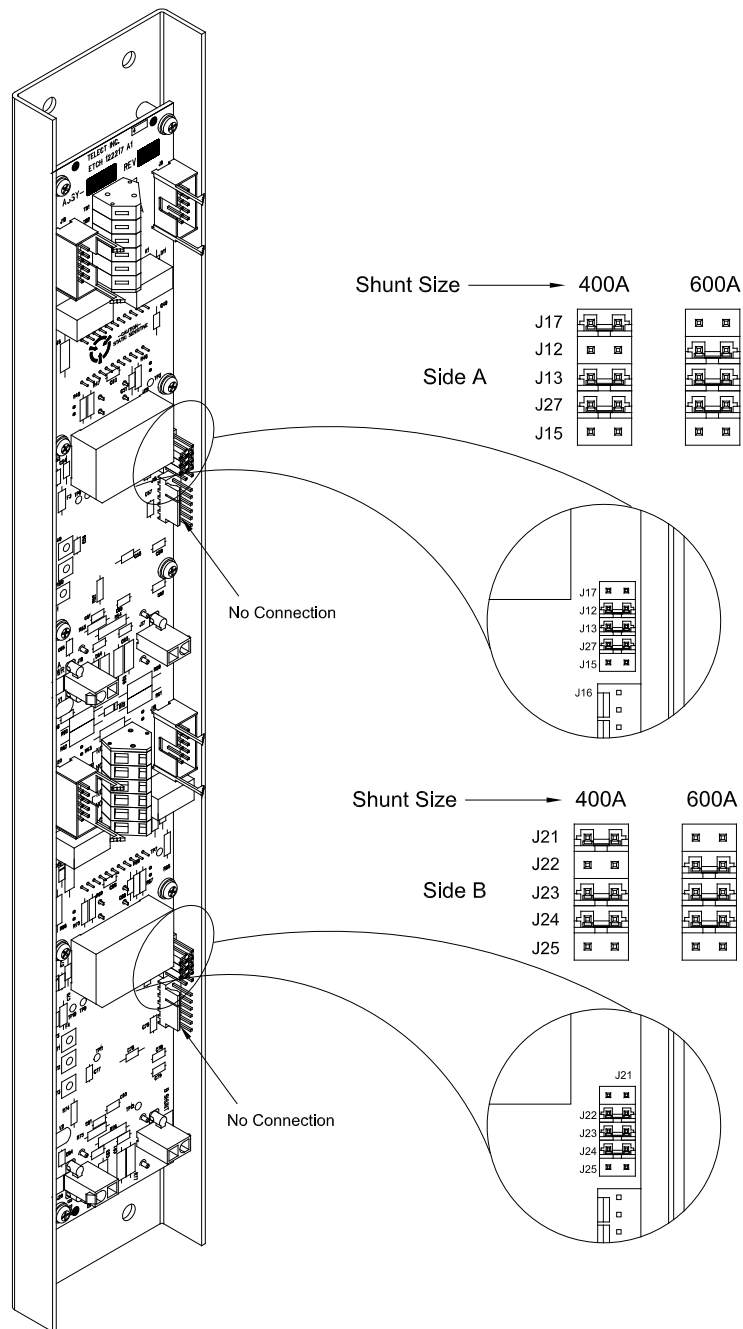

**Figure 5 - Jumper Settings for Shunt Size on Digital Metering Panel**

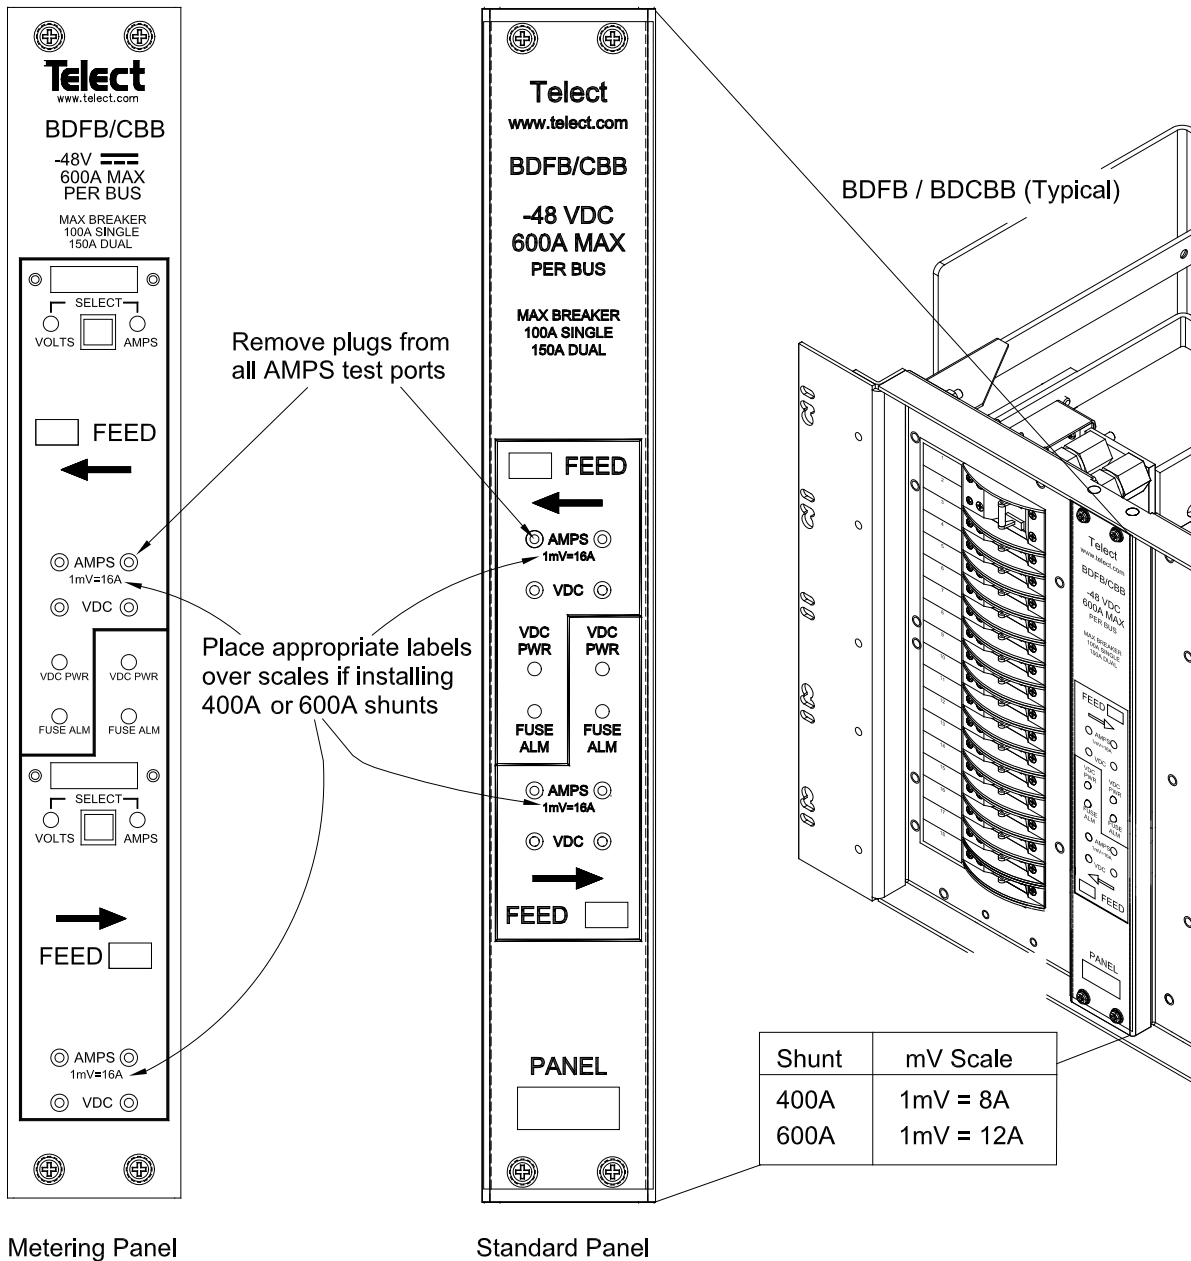

**Figure 6 - Front Panel Labeling**

*This page intentionally left blank.*